


 

 








 






 
 

Original	Substituto
Open / Close	Eject / Surround
Power	Power
CD / DVD	Shift + 3
CD / DVD	Shift + 2
Band	Smart / List
Band	Shift + 6
AUX	Shift + 7
Mute	Mute / Dimmer
Dimmer	Shift + Mute / Dimmer
Sleep	Sleep / Timer
1	1
2	2
3	3
RDS	AV / Input / RDS
4	4
5	5
6	6

Original	Substituto
PTY	Shift + Smart / List
7	7
8	8
9	9
PTY Search	Shift + Display / Media
Repeat	Green / APP / Repeat
0	0
Repeat A-B	Yellow / YouTube / Repeat
Program	TV/Radio /
Clear	Exit / Cancel / Clear
Sound Mode	Sound / Title
Preset+	Shift + >>I / Preset+
Preset+	CH+ / Page+
Audio	Audio / Lang I/II
Volume+	Vol+
Preset-	Shift + I<< / Preset-
Preset-	CH- / Page-





Original	Substituto	Original	Substituto
 Subtitle	 Subtitle / EQ	 I<< / Skip Scan-	 I<< / Preset-
 Volume-	 Vol-	 >>I / Skip Scan+	 >>I / Preset+
 Zoom	 Zoom / Size	 Title	 Shift + Sound / Title
 Return	 Back / Return	 Marker	 Fav / Marker / PC
 Up	 Up	 Search	 Red / Netflix / Search
 Left	 Left	 Angle	 Info / Angle
 Enter	 OK		
 Right	 Right		
 Menu	 Menu / Home		
 Down	 Down		
 Display	 Display / Media		
 Setup	 Setup / OPT /		
 Stop	 Stop / Hold		
 Pause / Step	 Pause / Step / Freeze		
 Play	 Play / Slow		
 << / Slow Scan-	 << / Tune-		
 >> / Slow	 >> / Tune+		

Original	Substituto
 I<< / Skip Scan-	 I<< / Preset-
 >>I / Skip Scan+	 >>I / Preset+
 Title	 Shift + Sound / Title
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Angle	 Info / Angle



Scan+