


 

 

 

 









 
 
 



 
 

 
 
















 






 

 







 






Original	Substituto	Original	Substituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PIP/Audio		3D
	[<>]		Format
	?		Smart
	Mute		Mute
	Z/Disc Menu		Menu
	i/OSD		Info
	TXT		Text
	TV-G		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/Image/I>		Red
	Green/Timer		Green
	Yellow/@		Yellow
	Blue/Sound		Blue
	Play		Play
	Pause		Pause


 

 
 




 
 
 
 

 






 







Original	Substituto	Original	Substituto
	Stop		Stop
	<<		<<
	>>		>>
	I<		I<<
	>		>>













Original	Substituto	Original	Substituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PIP/Audio		3D
	[<>]		Format
	?		Smart
	i/OSD		Info
	TXT		Text
	TV-G		Guide
	Z/Disc Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/Image/I>		Red
	Green/Timer		Green
	Yellow/@		Yellow
	Blue/Sound		Blue
	Play		Play
	Pause		Pause
	Stop		Stop




 

 

 











 
 
 



 
 

 




 


 




 


 




 
 
 
 
 

 
 
 
 

 




	Original	Substituto	Original	Substituto
	<<			<<
	>>			>>
	>			>>
	<			<<















Original	Substituto	Original	Substituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PIP/Audio		3D
	[<>]		Format
	?		Smart
	Mute		Mute
	i/OSD		Info
	TXT		Text
	Z/Disc Menu		Menu
	TV-G		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/Image/I>		Red
	Green/Timer		Green
	Yellow/@		Yellow
	Blue/Sound		Blue
	Play		Play
	Pause		Pause







 


 






 


 

 







	Original	Substituto	Original	Substituto
	Stop			
	<<			
	>>			
	I<			
	>I			




 








Original	Substituto	Original	Substituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PIP/Audio		3D
	[<>]		Format
	?		Smart
	i/OSD		Info
	TXT		Text
	TV-G		Guide
	Z/Disc Menu		Menu
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Red/Image/I>		Red
	Green/Timer		Green
	Yellow/@		Yellow
	Blue/Sound		Blue
	Play		Play
	Pause		Pause
	Stop		Stop





	Original	Substituto		Original	Substituto
	<<		<<		
	>>		>>		
	<		<<		
	>		>>		

