














































 












































Original	Substituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Mute	 Mute / Dimmer
 0	 0
 PIP	 Setup / OPT /
 Timer	 Sleep / Timer
 Format	 Picture / Format
 Disp	 Display / Media
 EPG	 Guide / EPG / -/--

Original	Substituto
 Δ∇	 Smart / List
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Left / V-	 Left
 Left / V-	 Vol-
 OK	 OK
 Right / V+	 Vol+
 Right / V+	 Right
 Down / P-	 CH- / Page-
 Down / P-	 Down
 Input	 AV / Input / RDS
 Text	 Text / Goto
 Red / Picture	 Shift + Picture / Format
 Red / Picture	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Substituto
 Yellow	 Yellow / YouTube / Repeat
 Blue / Sound	 Sound / Title
 Blue / Sound	 Blue / Prime Video / Random
 << / -/00	 << / Tune-
 Play/Pause / Text Reveal	 Play / Slow
 Play/Pause / Text Reveal	 Pause / Step / Freeze
 >> / +/00	 >> / Tune+
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Rec / Text Cancel	 Rec / Rec Mode

Original	Substituto

