







































 



























Original	Substituto	Original	Substituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i		Info / Angle
	0/AV		0
	Mute		Mute / Dimmer
	Up		Up
	P+		CH+ / Page+
	Vol+		Vol+
	Right		Right
	Vol-		Vol-
	Left		Left
	OK		OK
	P-		CH- / Page-
	Down		Down
	AUX		Shift + 7
	TXT		Text / Goto
	Red/Picture		Red / Netflix / Search
	Green/Timer		Green / APP / Repeat
	Yellow/Format		Yellow / YouTube / Repeat
	Blue/Audio		Blue / Prime Video / Random
	Colour-		<< / Tune-
	Colour+		>> / Tune+
	Brightness-		I<< / Preset-
	Brightness+		>>I / Preset+





Original	Substituto	Original	Substituto
 Power	 Power	 Vol-	 Vol-
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 P-	 CH- / Page-
 4	 4	 Down	 Down
 5	 5	 AUX	 Shift + 7
 6	 6	 TXT	 Text / Goto
 7	 7	 Red/Picture	 Red / Netflix / Search
 8	 8	 Green/Timer	 Green / APP / Repeat
 9	 9	 Yellow/Format	 Yellow / YouTube / Repeat
 i	 Info / Angle	 Blue/Audio	 Blue / Prime Video / Random
 0/AV	 0	 Colour-	 << / Tune-
 Mute	 Mute / Dimmer	 Colour+	 >> / Tune+
 Up	 Up	 Brightness-	 I<< / Preset-
 P+	 CH+ / Page+	 Brightness+	 >>I / Preset+
 Right	 Right		
 Vol+	 Vol+		





Original	Substituto	Original	Substituto
	Power		Power
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	P+		CH+ / Page+
	>>		>> / Tune+
	<<		<< / Tune-
	Play		Play / Slow
	P-		CH- / Page-
	AUX		7
	TXT		Text / Goto

Original	Substituto

