 

 

















Original	Substituto
 Power On	 Power
 Mute	 Mute / Dimmer
 Play / Play	 Play / Slow
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 Preset -	 I<< / Preset-
 Vid 3 / CBL/SAT	 Eject / Surround
 Tun-M. / Hold	 Picture / Format
 Mem. / Size	 Zoom / Size
 Night	 Sleep / Timer
 AM / FM	 TV/Radio /
 Set	 Setup / OPT /
 [=]	 Text / Goto
 Input	 AV / Input / RDS
 Menu / SPKR.	 Menu / Home

Original	Substituto
 Up	 Up
 Left	 Left
 Right	 Right
 Delay / Normal	 Exit / Cancel / Clear
 Down	 Down
 RDS / D.Skip	 Back / Return
 Vol +	 Vol+
 Digital / [=X]	 Smart / List
 PR + / Sleep	 CH+ / Page+
 Vol -	 Vol-
 OSD	 Display / Media
 PR - / Surr.	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original	Substituto	Original	Substituto
	6		6
	7		7
	8		8
	9		9
	CH. / [=/?]		Guide / EPG / -/--
	0		0
	Red / Tuning +		Red / Netflix / Search
	Green / Direct		Green / APP / Repeat
	Yellow / Clear		Yellow / YouTube / Repeat
	Blue / Preset +		Blue / Prime Video / Random
	Power Off		Shift + Power
	Vid 2 / TV		Shift + TV/Radio / Program
	Test		Shift + Text /
	Tuning -		Shift + Left
	PR + / Sleep		Shift + CH+ /
	Vid 1 / VCR		Shift + 1
	DVD		Shift + 2

Original	Substituto	Original	Substituto
	CD		Shift + 3
	Vid. 4		Shift + 4
	Tape		Shift + 5
	6 CH.		Shift + 6
	Red / Tuning +		Shift + Red / Netflix /
	Blue / Preset +		Shift + Blue / Prime

