



Original	Substituto
Power On	Power
Power Off	Shift + Power
Mute	Mute
Stereo	Shift + Dual
Cable/Sat	Green
TV	Blue
CD	Yellow
Menu	Menu
Harman Volume	Smart
Exit	Exit
Tone Control	Back
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
1	1

Original	Substituto
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Shift + Exit
Direct	Guide
Vol+	Vol +
Vol-	Vol -
CH/Tuner Up	Ch +
CH/Tuner Down	Ch -
Speaker 1	Options
Speaker 2	Dual





Original	Substituto
Power On	Power
Power Off	Shift + Power
Left	Left
Right	Right
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Vol+ Stereo	Vol +
Vol- Stereo	Vol -
Stereo	Dual

Original	Substituto
Cable/Sat	Green
CD	Yellow
TV	Blue
Mute	Mute






Original	Substituto
Power On	Power
Power Off	Shift + Power
Mute	Mute
Stereo	Shift + Dual
Cable/SAT	Green
TV	Blue
CD	Yellow
Menu	Menu
Harman Volume	Smart
Exit	Exit
Tone Control	Back
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
1	1

Original	Substituto
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Shift + Exit
Direct	Guide
Vol+ Stereo	Vol +
Vol- Stereo	Vol -
CH/Tuner Down	Ch +
CH/Tuner Up	Ch -
Speaker 1	Options
Speaker 2	Dual





Original	Substituto	Original	Substituto
	Sleep		Sleep
	DIM		TV/R
	P.Scan		Text
	A.Preset		AV
	MEM		Format
	RDS		Subt
	Prev.CH		Pre Ch
	I<		I<<
	<<		<<
	>>		>>
	>I		>>I
	Stop		Stop
	Play		Play
	Pause		Pause

