













 







 





 

 

 



 







 







 































 







 

 




 










Original	Substituto	Original	Substituto
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 Nicam/A2	 Shift + Audio / Lang I/II	 1	 1
 Sleep	 Sleep / Timer	 2	 2
 Aspect	 Zoom / Size	 3	 3
 USB/CR	 Shift + 8	 4	 4
 Display	 Display / Media	 5	 5
 Auto	 Smart / List	 6	 6
 PMode	 Picture / Format	 7	 7
 SMode	 Sound / Title	 8	 8
 DTV	 D.Menu / Top	 9	 9
 Source	 AV / Input / RDS	 0	 0
 Up	 Up	 -/--	 Guide / EPG / -/--
 Left	 Left	 Back	 Back / Return
 Enter	 OK	 CH+	 CH+ / Page+
 Right	 Right	 Info	 Info / Angle
 Down	 Down	 Audio	 Audio / Lang I/II





Original	Substituto
 Vol+	 Vol+
 CH-	 CH- / Page-
 FAV	 Fav / Marker / PC
 Tv/Radio	 TV/Radio /
 Vol-	 Vol-
 Text	 Text / Goto
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop/EPG	 Stop / Hold
 Subtitle	 Subtitle / EQ
 Rec/Hold	 Rec / Rec Mode
 <</Index	 << / Tune-
 >>/Size	 >> / Tune+
 I<</Reveal	 I<< / Preset-
 >>I/Sbpage	 >>I / Preset+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat

Original	Substituto
 Yellow	 Yellow / YouTube / Repeat
 Cyan	 Blue / Prime Video / Random

