



Original	Substituto	Original	Substituto
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		TV/ Radi o /
	0		0
	Recal l		Fav / Marker / PC
	V+		Vol +
	Mut e		Mut e / Di mmer
	P+		CH+ / Page+
	V-		Vol -
	Worl d/ I nt er net		Smart / Li st
	P-		CH / Page-
	Menu		Menu / Home
	Q. Menu		D. Menu / Top
	Up		Up
	Lef t		Lef t
	OK		OK
	Ri ght		Ri ght
	Down		Down
	Back		Back / Ret urn
	Exi t		Exi t / Cancel / Clear
	i		I nf o / Angl e
	Musi c/ Camer a		Di spl ay / Medi a
	TV Gui de		Gui de / EPG / - / -
	*/ O		Shi ft + 1
	*/ Q		Shi ft + 2





Original	Substituto	Original	Substituto
[ ≡ ] / Text	GOTO TEXT Text / Got o		
Red	NETFLIX SEARCH Red / Netfli x / Search		
Green	APP REPEAT Green / APP / Repeat		
Yel low	YouTube REPEAT A-B Yel low / You Tube / Repeat		
Bl ue	Prime Video RANDOM Bl ue / Pri me Vi deo / Random		
Lang	LANG I/II AUDIO Audi o / Lang I / II		
[ ≡ ] . .	TITLE SOUND Sound / Ti tle		
[ - O - ]	OPT-TOOLS SETUP Set up / OPT /		
<<	TUNE- << / Tune-		
	STEP-FREEZE    Pause / Step / Freeze		
>>	TUNE+ >> / Tune+		
Rec	REC MODE Rec / Rec Mde		
Pl ay	SLOW ▶ Pl ay / Sl ow		
St op	HOLD ■ St op / Hol d		

