



| Original                                                                            | Substituto | Original                                                                            | Substituto        |
|-------------------------------------------------------------------------------------|------------|-------------------------------------------------------------------------------------|-------------------|
|    | Power      |    | Power             |
|    | Input      |    | AV / Input / RDS  |
|    | 1          |    | 1                 |
|    | 2          |    | 2                 |
|    | 3          |    | 3                 |
|    | 4          |    | 4                 |
|    | 5          |    | 5                 |
|    | 6          |    | 6                 |
|    | 7          |    | 7                 |
|    | 8          |   | 8                 |
|  | 9          |  | 9                 |
|  | Lang       |  | Audio / Lang I/II |
|  | 0          |  | 0                 |
|  | TXT        |  | Text / Goto       |
|  | Vol+       |  | Vol+              |
|  | Mute       |  | Mute / Dimmer     |
|  | P+         |  | CH+ / Page+       |

| Original                                                                              | Substituto | Original                                                                              | Substituto            |
|---------------------------------------------------------------------------------------|------------|---------------------------------------------------------------------------------------|-----------------------|
|    | Vol-       |    | Vol-                  |
|    | Home       |    | Menu / Home           |
|    | P-         |    | CH- / Page-           |
|    | Guide      |    | Guide / EPG / -/-     |
|    | Up         |    | Up                    |
|    | i          |    | Info / Angle          |
|    | Left       |    | Left                  |
|    | OK         |    | OK                    |
|    | Right      |    | Right                 |
|   | Back       |   | Back / Return         |
|  | Down       |  | Down                  |
|  | Exit       |  | Exit / Cancel / Clear |
|  | <<         |  | << / Tune-            |
|  | Pause      |  | Pause / Step / Freeze |
|  | >>         |  | >> / Tune+            |
|  | Rec        |  | Rec / Rec Mode        |
|  | Play       |  | Play / Slow           |



