


 
 
 



 

 






 

 
 
 
 
 







 







 

 




 

 





 



 





 

 

 


 

 





 




Original	Substituto	Original	Substituto
	Power		Power
	[≡]		Text
	16:9		Format
	Mute		Mute
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Digital		Smart
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	TV		TV/R
	Exit		Exit
	Menu		Menu
	Vol +		Vol +
	Vol -		Vol -
	P +		Ch +
	P -		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	CH Guide		Guide
	[≡] / Help		Options





Original	Substituto	Original	Substituto
 [....]	 Subt		
 [=□] / [▶ ◀]	 Stop		
 Input	 AV		
 [=?] / ((↔))	 Media		
 [=X] / ⊖	 +  Shift + Exit		
 INFO [=↑] / Info	 Info		
 LANG I-II-▽	 Dual		





Original		Substituto		Original		Substituto	
	Power		Power		7		7
	Viewlink VCR REC		Rec		8		8
	Play		Play		9		9
	<<		<<		0		0
	Pause		Pause		Input		AV
	>>		>>		Lang I-II		Dual
	Stop		Stop				
	TV		Smart				
	Menu		Menu				
	P +		Ch +				
	P -		Ch -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				

