



Original	Substituto	Original	Substituto
	Power		Power
	[i+]		Info
	DTT/TV		TV/R
	AV1		Shift + 1
	AV2		Shift + 2
	AV3		Shift + 3
	AV4		Shift + 4
	AV5		Shift + 5
	RGB1		Shift + 7
	RGB2		Shift + 8
	Menu		Menu
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	♪ / S.Mode		Shift + Dual
	⦿ / P.Mode		Shift + Format
	Vol+		Vol +
	Vol-		Vol -
	I/II		Dual
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9














 



 

 






 
 




Original	Substituto	Original	Substituto
	0		0
	2-4-12 / []		3D
	[]		Options
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[]		List
	[]		Smart
	[...]/Slide Show		Subt
	[]/?/Rotate		Pre Ch
	[]		Text
	Swivel		Sleep
	[<>]		Format
	Photo		Media





	Original	Substituto	Original	Substituto
	Power			
	OK			
	Up			
	Down			
	Right			
	Left			
	Menu			
	Play			
	Stop			
	Pause			
	<<			
	>>			
	P+			
	P-			





	Original	Substituto		Original	Substituto
	Power		Power		8
	OK		Ok		9
	Up		Up		0
	Down		Down		
	Right		Right		
	Left		Left		
	P+		Ch +		
	P-		Ch -		
	Vol+		Vol +		
	Vol-		Vol -		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		

