











Original	Substituto	Original	Substituto
 Power	 Power	 V+	 Vol+
 Tv/Rad	 TV/Radio /	 Recall	 Back / Return
 Tv/SAT	 Smart / List	 P+	 CH+ / Page+
 Red/Opt	 Red / Netflix / Search	 V-	 Vol-
 Red/Opt	 Setup / OPT /	 P-	 CH- / Page-
 Green/A/V+	 Green / APP / Repeat	 1	 1
 Yellow/FAV	 Yellow / YouTube / Repeat	 2	 2
 Yellow/FAV	 Fav / Marker / PC	 3	 3
 Blue/A-Z	 Blue / Prime Video / Random	 4	 4
 Menu	 Menu / Home	 5	 5
 EPG	 Guide / EPG / -/--	 6	 6
 Info	 Info / Angle	 7	 7
 Up	 Up	 8	 8
 Left	 Left	 9	 9
 OK	 OK	 Pause	 Pause / Step / Freeze
 Right	 Right	 0	 0
 Down	 Down	 Mute	 Mute / Dimmer

Original	Substituto	Original	Substituto
 V+	 Vol+	 V+	 Vol+
 Recall	 Back / Return	 P+	 CH+ / Page+
 V-	 Vol-	 P-	 CH- / Page-
 1	 1	 2	 2
 2	 3	 3	 4
 3	 5	 4	 6
 4	 7	 5	 8
 5	 9	 6	 Pause / Step / Freeze
 6	 0	 7	 Mute / Dimmer
 7	 Mute / Dimmer	 8	 Mute / Dimmer
8	Mute / Dimmer	9	Mute / Dimmer
9	Mute / Dimmer	0	Mute / Dimmer
0	Mute / Dimmer	Mute	Mute / Dimmer
Mute	Mute / Dimmer	Mute	Mute / Dimmer

