





































Original	Substituto	Original	Substituto
Power	 Power	CH / Guide	 Guide / EPG / -/-
Recall	 Back / Return	Up	 Up
CC	 Subtitle / EQ	M	 Menu / Home
Text	 Text / Goto	A / CH	 Info / Angle
Smart	 Smart / List	Down	 Down
Sleep	 Sleep / Timer	Vol+	 Vol+
1	 1	Vol-	 Vol-
2	 2	Left / -	 Left
3	 3	Right / +	 Right
4	 4	Mute	 Mute / Dimmer
5	 5	CH+	 CH+ / Page+
6	 6	CH-	 CH- / Page-
7	 7	A	 Red / Netflix / Search
8	 8	B	 Green / APP / Repeat
9	 9	C	 Yellow / YouTube / Repeat
0	 0	D	 Blue / Prime Video / Random
Reset	 Exit / Cancel / Clear	G	 Shift + Yellow / YouTube / Repeat




































 


Original	Substituto	Original	Substituto
Clock	+ Shift + Sleep / Timer		
E	+ Shift + Red / Netflix /		
F	+ Shift + Green / APP /		
A / V	AV / Input / RDS		





Original	Substituto	Original	Substituto
Power		Power	
Recall		Back / Return	
CC		Subtitle / EQ	
Text		Text / Goto	
Smart		Smart / List	
Sleep		Sleep / Timer	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Reset		Exit / Cancel / Clear	

Original	Substituto	Original	Substituto
Up		Up	
CH / Guide		Guide / EPG / -/--	
Down		Down	
M		Menu / Home	
Vol+		Vol+	
A / CH		Info / Angle	
Vol-		Vol-	
Mute		Mute / Dimmer	
Left / -		Left	
Right / +		Right	
CH+		CH+ / Page+	
CH-		CH- / Page-	
A		Red / Netflix / Search	
B		Green / APP / Repeat	
C		Yellow / YouTube / Repeat	
D		Blue / Prime Video / Random	
Clock		Shift + Sleep / Timer	






























 








Original	Substituto	
E	+	Shift + Red / Netflix /
F	+	Shift + Green / APP /
G	+	Shift + Yellow / YouTube /
A / V		AV / Input / RDS

Original	Substituto





Original	Substituto	Original	Substituto
Power	 Power	CH / Guide	 Guide / EPG / -/--
Recall	 Back / Return	Up	 Up
CC	 Subtitle / EQ	Down	 Down
Text	 Text / Goto	A / CH	 Info / Angle
Smart	 Smart / List	M	 Menu / Home
Sleep	 Sleep / Timer	Right / +	 Right
1	 1	Left / -	 Left
2	 2	Vol+	 Vol+
3	 3	Vol-	 Vol-
4	 4	Mute	 Mute / Dimmer
5	 5	CH+	 CH+ / Page+
6	 6	CH-	 CH- / Page-
7	 7	A	 Red / Netflix / Search
8	 8	B	 Green / APP / Repeat
9	 9	C	 Yellow / YouTube / Repeat
0	 0	D	 Blue / Prime Video / Random
Reset	 Exit / Cancel / Clear	E	 Shift + Red / Netflix / Search





Original	Substituto	Original	Substituto
F	+ Shift + Green / APP /		
G	+ Shift + Yellow / YouTube /		
Clock	+ Shift + Sleep / Timer		
A / V	AV / Input / RDS		

