



Original		Substituto		Original		Substituto	
	Power		Power		7		7
	Mute		Mute / Dimmer		8		8
	Vol-		Vol-		9		9
	Vol+		Vol+		0		0
	P-		CH- / Page-		-/--		Guide / EPG / -/--
	P+		CH+ / Page+		Contrast-		I<< / Preset-
	Power 2		Shift + Power		Contrast+		>>I / Preset+
	[+]		Display / Media		Brightness-		Down
	PP		Back / Return		Brightness+		Up
	[]		Info / Angle		Text		Text / Goto
	[]↔		Picture / Format		Text Subcode		Subtitle / EQ
	1		1		Text Hold		Shift + Stop /
	2		2		Text Size		Zoom / Size
	3		3		Text Reveal		Smart / List
	4		4		Text Index / Play		Play / Slow
	5		5		Text Mix		Shift + Text /
	6		6		Text Cancel		Exit / Cancel / Clear

 







 



 



 







 


 
 













 

























Original	Substituto	Original	Substituto
	Red / Rec		Red / Netflix / Search
	Red / Rec		Rec / Rec Mode
	Green / Stop		Green / APP / Repeat
	Green / Stop		Stop / Hold
	Yellow / <<		Yellow / YouTube / Repeat
	Yellow / <<		<< / Tune-
	Blue / >>		Blue / Prime Video / Random
	Blue / >>		>> / Tune+





Original	Substituto	Original	Substituto
 Power	 Power	 7	 7
 Mute	 Mute / Dimmer	 8	 8
 Vol-	 Vol-	 9	 9
 Vol+	 Vol+	 0	 0
 P-	 CH- / Page-	 -/--	 Guide / EPG / -/--
 P+	 CH+ / Page+	 Text	 Text / Goto
 Power 2	 Shift + Power	 Text Subcode	 Subtitle / EQ
 [+]	 Display / Media	 Text Hold	 Shift + Stop /
 PP	 Back / Return	 Text Size	 Zoom / Size
 []	 Info / Angle	 Text Reveal	 Smart / List
 []↔	 Picture / Format	 Play	 Play / Slow
 1	 1	 Text Mix	 Shift + Text /
 2	 2	 Text Cancel	 Exit / Cancel / Clear
 3	 3	 Rec	 Rec / Rec Mode
 4	 4	 Stop	 Stop / Hold
 5	 5	 <<	 << / Tune-
 6	 6	 >>	 >> / Tune+

