

 
 
 

 
 
 
 



 

 

 




 
 
 


 





Original	Substituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --	 Guide
 P<P	 Pre Ch
 Menu	 Menu
 [ i ]	 Info
 Up / P+	 Up
 Up / P+	 Ch +

Original	Substituto
 Down / P-	 Down
 Down / P-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 I/II	 Dual
 PP	 Back
 TV	 TV/R
 AV	 AV
 Mute	 Mute
 Red / Sound	 Red
 Red / Sound	 Shift + Dual
 Green / Picture	 Format
 Green / Picture	 Green
 Yellow / Feature	 Yellow





Original	Substituto	Original	Substituto
Blue / Install	Blue		
[=]	Text		
[=⊕]	Sleep		
[=□]	Stop		
[=X] / [■]	Exit		
[ / ] [ ■ ]	Shift + Text		
[=↑] / [□]	Eject		
[=?] / PC	Smart		
[=i]	Options		

