



Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Lang		Audio / Lang / I/II
	Source (Games)		Eject / Surround
	Movie-Music-Phot		Picture / Format
	[≡]..		Zoom / Size
	* / O		Sleep / Timer
	TV		TV/Radio /
	Q.Menu		D.Menu / Top
	[-O-]		Setup / OPT /
	[≡]/Text		Text / Goto
	Menu		Menu / Home
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	World (Violet)		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	* / Q		Display / Media
	PR-		CH- / Page-
	1		1
	2		2





Original		Substituto		Original		Substituto	
3 def	3	3	3				
4 ghi	4	4	4				
5 jkl	5	5	5				
6 mno	6	6	6				
7 pqrs	7	7	7				
8 tuv	8	8	8				
9 wxyz	9	9	9				
 Guide	Guide	 Guide / EPG / -/--					
0	0	0	0				
	Red	 Red / Netflix / Search					
	Green	 Green / APP / Repeat					
	Yellow	 Yellow / YouTube / Repeat					
	Blue	 Blue / Prime Video / Random					
	Recall	 Shift + Back / Return					

