








 


 
 

Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DTV/ATV		D.Menu / Top
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer

Original	Substituto	Original	Substituto
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	MTS		Info / Angle
	Rec List		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode














 

 












 





 

Original	Substituto
 Freeze	 Pause / Step / Freeze
 Guide	 Guide / EPG / -/-
 <<	 << / Tune-
 >> / Aspect	 >> / Tune+
 >> / Aspect	 Shift + Picture / Format
  << / Cancel	  << / Preset-
  << / Cancel	 Shift + Exit / Cancel / Clear
 >>  / Sub.PG	 >>  / Preset+
 Stop / Index	 Stop / Hold
 Play/Pause / Timeshift	 Play / Slow
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Reveal	 Eject / Surround
 Size	 Zoom / Size
 Hold	 Shift + Stop /
 Text	 Text / Goto
 Red	 Red / Netflix / Search

Original	Substituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Cyan	 Blue / Prime Video / Random





Original	Substituto
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	DTV/ATV
	Recall
	P.Mode
	S.Mode
	Sleep

Original	Substituto
	Menu
	Source
	Up
	Left
	Enter
	Right
	Down
	Exit
	Display
	Vol+
	Vol-
	MTS
	Rec List
	CH+
	CH-
	FAV/List
	Rec





Original	Substituto	Original	Substituto
	Freeze		Pause / Step / Freeze
	Guide		Guide / EPG / -/-
	<<		<< / Tune-
	>> / Aspect		>> / Tune+
	>> / Aspect		Shift + Picture / Format
	<< / Cancel		<< / Preset-
	<< / Cancel		Shift + Exit / Cancel / Clear
	>>  / Sub.PG		>>  / Preset+
	Stop / Index		Stop / Hold
	Play/Pause / Timeshift		Play / Slow
	Tv/Radio		TV/Radio /
	Subtitle		Subtitle / EQ
	Reveal		Eject / Surround
	Size		Zoom / Size
	Hold		Shift + Stop /
	Text		Text / Goto
	Red		Red / Netflix / Search

Original	Substituto	Original	Substituto
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Cyan		Blue / Prime Video / Random

