



| Original | | Substituto | | Original | | Substituto | |
|---|-----------------|---|--------------|---|------------------------|---|-------|
|  | Standby |  | Power |  | >> / Subpage |  | >> |
|  | Source |  | AV |  | Menu |  | Menu |
|  | Red |  | Red |  | Exit |  | Exit |
|  | Green |  | Green |  | Up |  | Up |
|  | Yellow |  | Yellow |  | Down |  | Down |
|  | Blue |  | Blue |  | Right |  | Right |
|  | P Mode |  | Format |  | Left |  | Left |
|  | S Mode |  | Dual |  | Enter |  | Ok |
|  | Freeze |  | Smart |  | Play/Pause / Timeshift |  | Play |
|  | TXT |  | Text |  | Play/Pause / Timeshift |  | Pause |
|  | Mix / Fav List |  | Pre Ch |  | Stop / EPG |  | Stop |
|  | Size / Subtitle |  | Subt |  | Stop / EPG |  | Guide |
|  | Cancel / Audio |  | Shift + Dual |  | Vol + |  | Vol + |
|  | Record |  | Rec |  | Vol - |  | Vol - |
|  | << / Index |  | << |  | Mute |  | Mute |
|  | >> / Hold |  | >> |  | TV / Radio |  | TV/R |
|  | I<< / Reveal |  | I<< |  | CH + |  | Ch + |





| Original | | Substituto | |
|-------------------|---------|-----------------|------|
| CH v | CH - | CH - | Ch - |
| 1 | 1 | 1 | 1 |
| 2 | 2 | 2 | 2 |
| 3 | 3 | 3 | 3 |
| 4 | 4 | 4 | 4 |
| 5 | 5 | 5 | 5 |
| 6 | 6 | 6 | 6 |
| 7 | 7 | 7 | 7 |
| 8 | 8 | 8 | 8 |
| 9 | 9 | 9 | 9 |
| 0 | 0 | 0 | 0 |
| DISPLAY [icon] | Display | DISPLAY INFO | Info |
| RECALL [icon] | Recall | RETURN BACK | Back |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | | Substituto | |
|----------|--|------------|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

