







Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	Recall		Back / Return
	Imagen		Picture / Format
	Sonido		Sound / Title
	Audio		Audio / Lang I/II

Original	Substituto	Original	Substituto
	Sleep		Sleep / Timer
	Fuente		Shift + Subtitle / EQ
	P+		CH+ / Page+
	Vol+		Vol+
	Info		Info / Angle
	P-		CH- / Page-
	Vol-		Vol-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down





Original	Substituto	Original	Substituto
 SALIR	Salir	 CLEAR EXIT CANCEL	Exit / Cancel / Clear
 SUBTITULO	Subtitulo	 EQ SUBTITLE	Subtitle / EQ
 INDICE	Indice	 TOP MENU D.MENU	D.Menu / Top
 TAMAÑO	Tamaño	 SIZE ZOOM	Zoom / Size
 MOSTRAR	Mostrar	 RDS AV INPUT	AV / Input / RDS
 MEZCLAR	Mezclar	 OPT-TOOLS SETUP	Setup / OPT /
 CONGELAR	Play	 SLOW	Play / Slow
 CONGELAR	Pause/Congelar	 STEP-FREEZE	Pause / Step / Freeze
 CANCELAR	I<</Cancelar	 PRESET-	I<< / Preset-
 SUBPÁG	>>I/Subpag	 PRESET+	>>I / Preset+
 GUÍA	Guía	 SHIFT + HOME MENU	Shift + Menu /
 FAV	FAV	 PC FAV MARKER	Fav / Marker / PC
 FAV	Stop	 HOLD	Stop / Hold
 FAV-	<</FAV-	 TUNE-	<< / Tune-
 FAV+	>>/FAV+	 TUNE+	>> / Tune+
 USB	USB	 SHIFT + USB 8	Shift + 8
 GRABAR	Grabar	 REC MODE	Rec / Rec Mode

Original	Substituto	Original	Substituto
 TIMESHIFT	Timeshift	 SHIFT + TIMER SLEEP	Shift + Sleep / Timer
 TV/RADIO	Tv/Radio	 PROGRAM TV/ RADIO	TV/Radio /

