



 





 

 

 

 





 



 



 

 



 

 



 



 

 

 

 

 



 



 






































Original	Substituto	Original	Substituto
 Power	 Power	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 Left	 Left
 1	 1	 Vol-	 Vol-
 2	 2	 Ok	 OK
 3	 3	 Right	 Right
 4	 4	 Vol+	 Vol+
 5	 5	 Media	 Display / Media
 6	 6	 CH-	 CH- / Page-
 7	 7	 Down	 Down
 8	 8	 TV/Radio	 TV/Radio /
 9	 9	 Sleep/Red	 Sleep / Timer
 0	 0	 Subtitle/Green	 Subtitle / EQ
 Info	 Info / Angle	 Teletext/Yellow	 Text / Goto
 Epg	 Guide / EPG / -/-	 Audio/Blue	 Audio / Lang I/II
 Menu	 Menu / Home	 <<	 << / Tune-
 CH+	 CH+ / Page+	 Play	 Play / Slow
 Up	 Up	 Pause	 Pause / Step / Freeze

Original	Substituto	Original	Substituto
 Power	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 Play	 Pause	 PRESET-	 PRESET+
 TUNE-	 TUNE+	 EQ	 SURROUND
 TITLE	 LANG I/II	 SLEEP	 PROGRAM
 SOUND	 AUDIO	 FORMAT	 TV RADIO
 PICTURE	 ZOOM	 TOP MENU	 RDS
 D.MENU	 SETUP	 GO TO	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 OK	 OK	 RETURN	 BACK
 EXIT	 CANCEL	 LIST	 SMART
 VOL+	 MEDIA	 CH PAGE	 DISPLAY
 TV	 DVD	 CD-DB	 CH PAGE
 1	 TAPE	 TUNER	 CH PAGE
 4	 USB	 BLUETOOTH	 CH PAGE
 7	 AUX-HDD	 HDMI-BAT	 FC
 GUIDE	 EPG	 FAV	 MARKER
NETFLIX	APP	YouTube	Prime Video
SEARCH	REPEAT	REPEAT A-B	RANDOM
Mandis SHOP			
<a href="http://www.mandis.tv">www.mandis.tv</a>			





Original	Substituto	Original	Substituto
	>>		>> / Tune+
	Prev		<< / Preset-
	Rec		Rec / Rec Mode
	FAV		Fav / Marker / PC
	Stop		Stop / Hold

