










 




 

 








 




Original	Substituto	Original	Substituto
	Power		Power
			Picture / Format
	Back		Back / Return
	Menu		Menu / Home
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Stop		Stop / Hold
	Smart Tv		Smart / List
	Skip Prev.		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Skip Next		>>I / Preset+
	Ch+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	Ch-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/00/Lang.		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	Source		AV / Input / RDS
	Option		Setup / OPT /
	Subt.		Subtitle / EQ
	IPTV		Display / Media
	Eco / Search		Fav / Marker / PC
	Guide-Popup		Guide / EPG / -/-
	Ch.List		Shift + Smart / List
	Info		Info / Angle





 

 

 

 



 

 

 





 

 

 

 




 







 


 

 

 

 

 

 



 











Original	Substituto	Original	Substituto
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 Disc Menu	 D.Menu / Top		
 0	 0		
 Text / Media	 Text / Goto		
 Sound	 Sound / Title		
 Repeat	 +  Shift + Green / APP /		

Original	Substituto	Original	Substituto





Original	Substituto	Original	Substituto
	Power		Power
	(•J)		TV/Radio /
	Back		Back / Return
	Menu		Menu / Home
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Stop		Stop / Hold
	Smart Tv		Smart / List
	Skip Prev.		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Skip Next		>>I / Preset+
	Ch+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	Ch-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/00/Lang.		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	Source		AV / Input / RDS
	Option		Setup / OPT /
	Subt.		Subtitle / EQ
	Iptv		Display / Media
	Eco/Search		Fav / Marker / PC
	Guide/ Popup		Guide / EPG / -/--
	Ch.List		Shift + Smart / List
	Info		Info / Angle





Original	Substituto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Disc Menu	D.Menu / Top
0	0
Text/ Media	Text / Goto
Sound	Sound / Title
Repeat	Shift + Green / APP /

Original	Substituto

