 
 



 



 
 





Original	Substituto	Original	Substituto
 Power	 Power	 Info	 Info
 Tv/Radio	 TV/R	 Exit	 Exit
 Mute	 Mute	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 CH+	 Ch +
 6	 6	 CH-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 Red/F1	 Red
 0	 0	 Green/F2	 Green
 EPG	 Guide	 Yellow/F3	 Yellow
 Recall	 Back	 Blue/F4	 Blue
 Menu	 Menu	 Subt	 Subt
 FAV	 Pre Ch	 Audio	 Dual




 


 
 
 


 


 
 




 


 

 




 







Original	Substituto	Original	Substituto
 TXT	 Text		
Zoom	 Eject		
Play/Pause	 Play		
Stop	 Stop		
I>/Slow	 Pause		
Rec	 Rec		
<<	 <<		
>>	 >>		
I<<	 I<<		
>>I	 >>I		

 





Original	Substituto	Original	Substituto
On/Off		Power	
Mute		Mute	
Update		Smart	
Subt.List		Subt	
Info		Info	
Sleep Timer		Sleep	
Return TV		TV/R	
Text		Text	
Menu		Menu	
Menu Up		Up	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Menu Off		Exit	
Menu Down		Down	
Back		Back	
Volume+		Vol +	
Chan.Up		Ch +	
Volume-		Vol -	
Menu audio		Dual	
Chan.Down		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
Guide -/-- 1.		Guide	
0/10		0	
Red		Red	
Green		Green	





Original	Substituto	Original	Substituto
Yellow		Yellow	
Blue		Blue	

