




Original	Substituto	Original	Substituto
	Power		Power
	Tv/Radio		TV/R
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	Recall		Back
	Menu		Menu
	FAV		Pre Ch

Original	Substituto	Original	Substituto
	Info		Info
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/F1		Red
	Green/F2		Green
	Yellow/F3		Yellow
	Blue/F4		Blue
	Subt		Subt
	Audio		Dual



