



 


 

 

 









 

 


 
 


 

 

 


 
 




Original	Substituto	Original	Substituto
	Power		Power
	TV/DTV		Smart
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Info		Info
	FAV		Shift + Pre Ch
	Picture		Shift + Format

Original	Substituto	Original	Substituto
	Sound		Shift + Dual
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	EPG		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	I/II		Dual
	Still		Format
	Zoom		Eject
	Exit		Exit





	Original	Substituto	
	Radio		TV/R
	Next		>>I
	Lang		List
	Subtitle		Subt
	Back		Back
	Forward		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	Size/PIP		3D
	Reveal/Swap		Options
	Cancel/CH Up		Shift + Ch +

	Original	Substituto	
	Mix/CH Down		Shift + Ch -
	Subcode/Source		Shift + AV
	Index/Position		Media
	Hold/Sleep		Sleep

