













 
 




Original	Substituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv/Radio	 TV/Radio /
 0	 0
 ←PR	 Back / Return
 Menu	 Menu / Home
 Info	 Info / Angle
 Page Up	 CH+ / Page+

Original	Substituto
 Exit	 Exit / Cancel / Clear
 EPG	 Guide / EPG / -/-
 Page Down	 CH- / Page-
 Up/PR+	 Up
 Left	 Left
 Vol-	 Vol-
 OK/List	 OK
 Right	 Right
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 Down/PR-	 Down
 Pause	 Pause / Step / Freeze
 SAT	 Shift + 0
 TV / AV	 AV / Input / RDS
 UHF	 Smart / List
 PAL/NTSC	 Picture / Format
 Audio	 Audio / Lang I/II





Original	Substituto	Original	Substituto
 AUDIO	Red	 NETFLIX SEARCH	Red / Netflix / Search
 POSITION	Green / Position	 APP REPEAT	Green / APP / Repeat
	[...]	 SUBTITLE EQ	Subtitle / EQ
	Yellow	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
	Blue/Audio L/R	 Prime Video RANDOM	Blue / Prime Video / Random

