




 









 

















 




Original	Substituto	Original	Substituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mute		Mute
	TV/AV		AV
	Pause		Pause
	Menu		Menu
	Red/Lang		Red
	Lang		Subt

Original	Substituto	Original	Substituto
	Green/Posi		Green
	Blue/Sound		Blue
	Sound		Dual
	Yellow/Text		Yellow
	Text		Text
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	EPG		Guide
	Info		Info
	FAV		Pre Ch
	PRE PR		Back
	Vol+		Vol +
	Vol-		Vol -





Original		Substituto	
	P+		Ch +
	P-		Ch -
	SAT		Smart
	UHF		Media
	PAL/NTSC		Format
	Tv/Radio		TV/R

Original		Substituto	

