




 




 

 






Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	TV		Media
	Text		Text
	Info		Info
	PIP		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 +  + 	Shift + Guide

Original	Substituto	Original	Substituto
	Source		AV
	Menu		Menu
	DTV Guide	 + 	Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	PR+		Ch +
	PR-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Exit		Exit
	ARC		3D
	Recall		Back
	Mix	 + 	Shift + Text
	Subpage		Subt





Original	Substituto
	SETTINGS OPT Options
	ZOOM Eject
	SHIFT + SETTINGS OPT Shift + Options
	PLAY MODE Play
	SHIFT + DISPLAY INFO Shift + Info
	A Red
	B Green
	C Yellow
	II Pause
	D Blue
	>>
	PROG SLEEP Sleep
	<<
	I<<
	E-MANUAL D.MENU D. Menu
	SEARCH TV/R TV/R
	>>I

Original	Substituto
	SHIFT + APP MEDIA Shift + Media
	SOUND DUAL Dual
	SHIFT + POWER Shift + Power
	SHIFT + AD SUBT Shift + Subt
	SHIFT + SOUND DUAL Shift + Dual
	DISC NAV LIST List
	PICTURE FORMAT Format
	FAV PRE-CH Pre Ch
	SHIFT + A Shift + Red
	SHIFT + C Shift + Yellow
	SHIFT + B Shift + Green
	SHIFT + RETURN BACK Shift + Back

