






Original	Substituto	Original	Substituto
 Power	 Power	 Vol-	 Vol-
 Source (Games)	 AV / Input / RDS	 World/Internet	 Smart / List
 1	 1	 PR-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Q.Menu	 D.Menu / Top
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Down	 Down
 9	 9	 Back	 Back / Return
 TV	 TV/Radio /	 Exit	 Exit / Cancel / Clear
 0	 0	 i	 Info / Angle
 Recall	 Fav / Marker / PC	 Movie-Music-Phot	 Display / Media
 Vol+	 Vol+	 Guide	 Guide / EPG / -/-
 Mute	 Mute / Dimmer	 */o	 Picture / Format
 PR+	 CH+ / Page+	 */o..	 Setup / OPT /

Original	Substituto	Original	Substituto
 Power	 Power	 TV	 DVD
 Source (Games)	 AV / Input / RDS	 SAT	 AUX
 1	 1	 SLOW	 STEP-FREEZE
 2	 2	 HOLD	 REC MODE
 3	 3	 TUNE-	 TUNE+
 4	 4	 PRESET-	 PRESET+
 5	 5	 TITLE	 LANG VUI
 6	 6	 EQ	 SURROUND
 7	 7	 SOUND	 AUDIO
 8	 8	 SUBTITLE	 TIMER
 9	 9	 PICTURE	 ZOOM
 TV	 TV/Radio /	 SLEEP	 PROGRAM
 0	 0	 TOP MENU	 OPT-TOOLS
 Recall	 Fav / Marker / PC	 D.MENU	 GOTO
 Vol+	 Vol+	 RDS	 AV INPUT
 Mute	 Mute / Dimmer	HOME	ANGLE
PR+	CH+ / Page+	MENU	INFO
		OK	RETURN
		EXIT	BACK
		i	CLEAR
		Movie-Music-Phot	CANCEL
		Guide	LIST
		*/o	SMART
		*/o..	MEDIA
			DISPLAY
			TV
			DVD
			CD - STB
			1
			2
			3
			VIDEO
			TAPE
			TUNER
			4
			5
			6
			AUX - HDD
			USB
			BLUETOOTH
			7
			8
			9
			GUIDE EPG
			HDMI - SAT
			PC
			0
			FAV MARKER
			NETFLIX
			APP
			YouTube
			Prime Video
			SEARCH
			REPEAT
			REPEAT A-B
			RANDOM
			Mandis SHOP
			www.mandis.tv





Original	Substituto	Original	Substituto
 [≡]/Text	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Lang	 Audio / Lang I/II		
 [≡]..	 Subtitle / EQ		
 [-o-]	 Zoom / Size		
 <<	 << / Tune-		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Stop	 Stop / Hold		

