 





 


 

 

 

 









 

 
 
 



 




Original	Substituto
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 Mode	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Back	 Back
 Nicam/A2	 Dual

Original	Substituto
 TXT/MIX	 Text
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Rec	 Rec
 >>/Index	 >>
 <</Hold	 <<
 I<<	 I<<
 >>I	 >>I
 Cancel	 Exit
 Menu	 Menu
 DTV/Radio	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right




 

 

 



 
















 





Original	Substituto	Original	Substituto
	Left		Left
	Enter		Ok
	CH+		Ch +
	CH-		Ch -
	FAV		Pre Ch
	EPG		Guide
	Info		Info
	List		List
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Size		Format
	Reveal		3D
	Subtitle		Subt
	Subpage		AV
	FAV+		Shift + Ch +

Original	Substituto
	FAV-
	SHIFT + CH - Shift + Ch -



 




 



 



Original	Substituto	Original	Substituto
Power		Power	
Mute		Mute	
[I]/Menu		Menu	
Exit		Exit	
Source		AV	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Subtitle		Subt	
Text		Text	

Original	Substituto	Original	Substituto
Vol+		Vol +	
Vol-		Vol -	
CH+		Ch +	
CH-		Ch -	
Up		Up	
Down		Down	
Right		Right	
Left		Left	
OK		Ok	
Recall		Back	
Info		Info	
EPG		Guide	
Freeze		Options	
Red		Red	
Green		Green	
Yellow		Yellow	
Blue		Blue	





Original	Substituto	Original	Substituto
Audio	 Dual		
I<</[≡+]	 I<<		
>>I/[≡..]	 >>I		
[≡i]	 Smart		
Play	 Play		
Pause	 Pause		
Stop	 Stop		
REP/Rec	 Rec		
<</[≡o]	 <<		
>>/[≡?]	 >>		
FAV	 Pre Ch		

