











Original	Substituto	Original	Substituto
	Mute		Mute / Dimmer
	Power		Power
	TV/Radio		TV/Radio /
	Guide		Guide / EPG / -/--
	Fav		Fav / Marker / PC
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0 / Swap		0
	0 / Swap		Back / Return

Original	Substituto	Original	Substituto
	i		Info / Angle
	Vol+		Vol+
	OK		OK
	CH+		CH+ / Page+
	Up		Up
	Left		Left
	Right		Right
	Vol-		Vol-
	Down		Down
	CH-		CH- / Page-
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<< / I<< / Instant Replay		<< / Tune-
	<< / I<< / Instant Replay		I<< / Preset-





Original	Substituto	Original	Substituto
 Play / Pause	 Play / Slow		
 >> / >>I	 >> / Tune+		
 >> / >>I	 >>I / Preset+		
 Library	 Display / Media		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Text	 Text / Goto		
 Personal Planner	 Smart / List		
 Sub / Audio	 Audio / Lang I/II		
 Sub / Audio	 Subtitle / EQ		
 History	 D.Menu / Top		
 PIP	 Picture / Format		
 PIP Swap	 Zoom / Size		
 PIP Position	 Setup / OPT /		
 Sleep Timer	 Sleep / Timer		

Original	Substituto

