





 








 

 

 



 

 

 





 








 

 



Original	Substituto	Original	Substituto
Guide	Guide / EPG / -/--		Play
Power	Power		Pause
Eject	Eject / Surround		<< / Tune-
Tv/Radio	TV/Radio /		>> / Tune+
Red/Goto	Red / Netflix / Search	D.Setup	Setup / OPT /
Green/Angle	Green / APP / Repeat	Rec	Rec / Rec Mode
Yellow/Repeat	Yellow / YouTube / Repeat	Stop	Stop / Hold
Blue/A-B	Blue / Prime Video / Random	I<<	I<< / Preset-
FAV	Fav / Marker / PC	>>I/Index	>>I / Preset+
Text	Text / Goto	Menu	Menu / Home
Freeze/Hold	Shift + Pause / Step /	Lang/Audio	Audio / Lang I/II
D.Menu	D.Menu / Top		Up
Subtitle	Subtitle / EQ		Left
Zoom/Size	Zoom / Size		OK
Aspect	Shift + Picture / Format		Right
Subpage	Info / Angle		Sleep
Media	Shift + Display / Media		Down

Original	Substituto	Original	Substituto
	Play / Slow		TV
	Pause / Step / Freeze		DVD
	<< / Tune-		SAT
	>> / Tune+		AUX
	Setup / OPT /		SLOW STEP-FREEZE HOLD REC MODE
Rec	Rec / Rec Mode		TUNE- TUNE+ PRESET- PRESET+
Stop	Stop / Hold		TITLE LANG I/II EQ SURROUND
I<<	I<< / Preset-		SOUND AUDIO SUBTITLE
>>I/Index	>>I / Preset+		FORMAT SIZE TIMER PROGRAM
Menu	Menu / Home		PICTURE ZOOM SLEEP TV RADIO
Lang/Audio	Audio / Lang I/II		TOP MENU OPT-TOOLS GOTO RDS
	Up		D.MENU SETUP TEXT AV INPUT
	Left		HOME ANGLE
	OK		MENU
	Right		OK
	Sleep		CLEAR EXIT
	Down		CANCEL
			LIST
			SMART
			MEDIA
			DISPLAY
			CH PAGE
			VOL +
			VOL -
			TV
			DVD
			CD-STB
			1
			2
			3
			VIDEO
			TAPE
			TUNER
			4
			5
			6
			AUX-HDD
			USB
			BLUETOOTH
			7
			8
			9
			GUIDE EPG
			0
			FAV MARKER
			NETFLIX
			APP
			YouTube
			Prime Video
			SEARCH
			REPEAT
			REPEAT A-B
			RANDOM
			Mandis SHOP
			www.mandis.tv





Original	Substituto
	 Exit / Cancel / Clear
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 +  Shift + Guide / EPG / -/--

Original	Substituto
	 0
	 Back / Return
	 AV / Input / RDS
	 Picture / Format
	 Sound / Title

