


 

 

 

 





 

 

 

 



 


 
 







 

 









 

 

 









 

 






Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info
	AV		AV
	Red/Zoom		Red
	Green/(↔)		Green
	Yellow/Timer		Yellow
	Blue/Picture		Blue
	O)/I/II		Dual
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	[≡]		Text
	Back		Back
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	^/[+]		Format
	Play/[?]		Play
	>>/[♦]		>>




 

 

 









 



 

 





 











 
 
 

 









 

 







 






Original	Substituto	Original	Substituto
	~/Timer		Options
	Stop/[X]		Stop
	Pause/[≡i]		Pause
	[■]		Subt
	[←■]		TV/R
	[⇕■]		3D
	♪		Shift + Dual





Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	i		Info
	O/I/II		Dual
	[≡]		Text
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/Zoom		Red
	Green/(↔)		Green
	Yellow/Timer		Yellow
	Blue/Picture		Blue
	<<		<<
	>>/[◆]		>>
	^[+]		Format
	~/Timer		Options
	Rec/Top Menu		Rec
	Play/[?]		Play
	Stop/[X]		Stop
	Pause/[≡i]		Pause
	[■]		Subt
	[←■]		TV/R



 


 

 

 





 

















 







 



 





 





 

 
 
 



 






Original		Substituto		Original	Substituto
	[↑↓]		3D		
	♪		Shift + Dual		
	Menu		Menu		
	Back		Back		
	OK		Ok		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		






 

 

 
 









Original	Substituto	Original	Substituto
 Power	 Power	 Green/(↔)	 Green
 Mute	 Mute	 Yellow/Timer	 Yellow
 1	 1	 Blue/Picture	 Blue
 2	 2	 OK	 Ok
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 P+	 Ch +
 8	 8	 P-	 Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 i	 DISPLAY INFO	 <<	 <<
 AV	 TIMER AV	 Play/[?]	 Play
 O/I/II	 SOUND DUAL	 >>/[♦]	 >>
 Menu	 TOP MENU MENU	 Stop/[X]	 Stop
 Red/Zoom	 A	 Pause/[≡i]	 Pause





	Original	Substituto	Original	Substituto
	^/[+]	 Format		
	~/Timer	 Options		
	[■]	 Subt		
	[←■]	 TV/R		
	[↓■]	 3D		
	♪	 Shift + Dual		
	Back	 Back		
	[≡]	 Text		

