




Original	Substituto
	 Mute / Dimmer
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Info / Angle
	 0
	 AV / Input / RDS
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat

Original	Substituto
	 Blue / Prime Video / Random
	 TV/Radio /
	 CH+ / Page+
	 Menu / Home
	 Up
	 Vol-
	 Left
	 OK
	 Right
	 Vol+
	 Down
	 Text / Goto
	 D.Menu / Top
	 CH- / Page-
	 Back / Return
	 Smart / List
	 Shift + Stop / Hold





Original	Substituto	Original	Substituto
 Up / Hold	 >>I / Preset+		
 << / F.T/L	 << / Tune-		
 Play / ?	 Play / Slow		
 >> / Guide / Size	 >> / Tune+		
 >> / Guide / Size	 Guide / EPG / -/--		
 Down / Timer	 I<< / Preset-		
 Down / Timer	 Display / Media		
 Rec / ◇	 Rec / Rec Mode		
 Stop / Cancel	 Stop / Hold		
 Stop / Cancel	 Exit / Cancel / Clear		
 Pause / Subtitle / [≡i]	 Pause / Step / Freeze		
 Pause / Subtitle / [≡i]	 Subtitle / EQ		
 Zoom	 Zoom / Size		
 Audio / Guide	 Audio / Lang I/II		
 I / II	 Shift + Audio / Lang I/II		
 I / II	 Sound / Title		
 Sleep	 Sleep / Timer		

