
 








Original	Substituto	Original	Substituto
 Power	 Power	 Picture	 Format
 Mute	 Mute	 AV	 AV
 1	 1	 Menu	 Menu
 2	 2	 PR+	 Ch +
 3	 3	 Up	 Up
 4	 4	 PR-	 Ch -
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 Left	 Left
 0	 0	 Up VCR	 Shift + Ch -
 Red/Zoom	 Red	 UP [≡]	 Shift + Text
 Green/00	 Green	 Up DVD	 Shift + Up
 Yellow	 Yellow	 Down VCR	 Shift + Ch +
 Blue	 Blue	 Down DVD	 Shift + Down
 Text	 Text	 << VCR	 Shift + <<



