













 













 
 










 
 



 

 
 



















Original	Substituto	Original	Substituto
 Power	 Power	 Picture	 Format
 Mute	 Mute	 AV	 AV
 1	 1	 Menu	 Menu
 2	 2	 PR+	 Ch +
 3	 3	 Up	 Up
 4	 4	 PR-	 Ch -
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 Left	 Left
 0	 0	 Up VCR	 Shift + Ch -
 Red/Zoom	 Red	 UP [≡]	 Shift + Text
 Green/00	 Green	 Up DVD	 Shift + Up
 Yellow	 Yellow	 Down VCR	 Shift + Ch +
 Blue	 Blue	 Down DVD	 Shift + Down
 Text	 Text	 << VCR	 Shift + <<

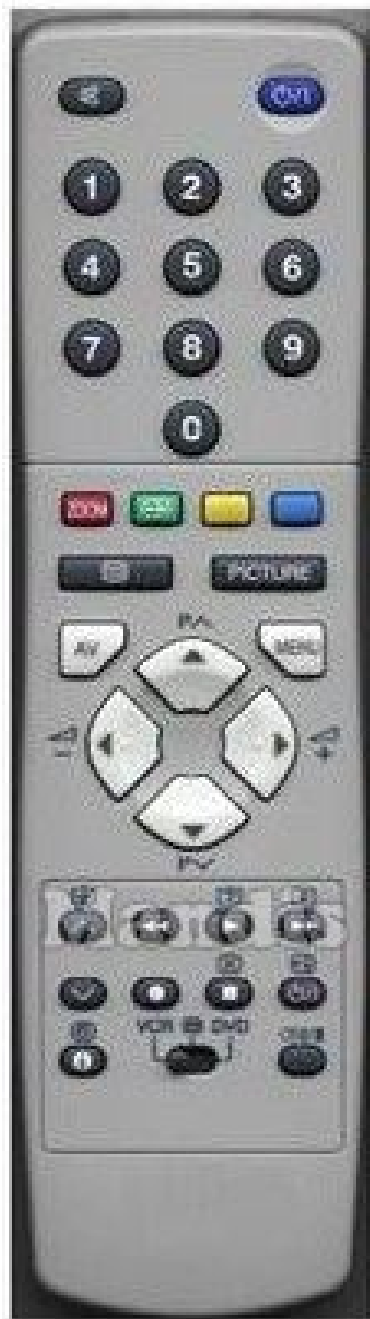Original	Substituto	Original	Substituto
 Picture	 Format	 AV	 AV
 Menu	 Menu	 PR+	 Ch +
 Up	 Up	 PR-	 Ch -
 Down	 Down	 Right	 Right
 Vol+	 Vol +	 Vol-	 Vol -
 Left	 Left	 Up VCR	 Shift + Ch -
 UP [≡]	 Shift + Text	 Up DVD	 Shift + Up
 Down VCR	 Shift + Ch +	 Down DVD	 Shift + Down
 << VCR	 Shift + <<		





Original	Substituto	Original	Substituto
 << DVD	 <<		
 Play/[?] VCR	 +  Shift + Play		
 Play/[?] [≡]	 Eject		
 Play/[?] DVD	 Play		
 >>/[+] VCR	 +  Shift + >>		
 >>/[+] [≡]	 +  Shift + Right		
 >>/[+] DVD	 >>		
 Rec VCR	 +  Shift + Rec		
 Stop/[X] VCR	 +  Shift + Stop		
 Stop/[X] [≡]	 EXIT Exit		
 Stop/[X] DVD	 Stop		
 Standby/[≡i] VCR	 +  Shift + Power		
 Standby/[≡i] [≡]	 MEDIA Media		
 Standby/[≡i] DVD	 SMART Smart		
 i/Timer	 INFO Info		
 O))/	 DUAL Dual		

