 




 

 

 


 









 

 













 


 





 



 



 








Original	Substituto	Original	Substituto
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 [≡]	 Text
 1	 1	 Back	 Back
 2	 2	 CH+	 Ch +
 3	 3	 CH-	 Ch -
 4	 4	 Vol+	 Vol +
 5	 5	 Vol-	 Vol -
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 Ok
 Red	 A	 ↑/[+]	 Pre Ch
 Green	 B	 F.T/L	 Options
 Yellow	 C	 [?]	 3D
 Blue	 D	 [♦]	 Format
 TV / DTV	 TV/R	 ↓/[   ]	 Guide





 
 

 





Original	Substituto	Original	Substituto
	>	E-MANUAL D.MENU	D. Menu
	[X]	CLEAR EXIT	Exit
	[≡i]	APP MEDIA	Media
ZOOM	Zoom	ZOOM	Eject
	(↔)	HOME SMART	Smart
	[ 1/♪]	SOUND DUAL	Dual
	[++]	AD SUBT	Subt











Original	Substituto	Original	Substituto
 Power	 Power		
 Menu	 Menu		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 OK	 Ok		
 Top Menu	 Shift + Menu		
 Back	 Back		
 ↑/[+]	 Pre Ch		
 ↓/[   ]	 Guide		
 <<	 <<		
 Play	 Play		
 >>	 >>		
 Stop	 Stop		
 Pause	 Pause		





Original	Substituto
 Power	 Power
 HDD	 Green
 VCR	 Yellow
 DVD	 Blue
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Top Menu	 Shift + Menu
 Back	 Back
 ↓/[ I ]	 Guide
 ↑/[ + ]	 Pre Ch
 F.T/L <<	 <<
 Play	 Play
 >>	 >>

Original	Substituto
 Rec	 Rec
 Stop	 Stop
 Pause	 Pause

