



Original	Substituto	Original	Substituto
Power Audio	Power	0	0
Function	Smart / List	Subtitle	Subtitle / EQ
Input	AV / Input / RDS	Prog / Memo	Fav / Marker / PC
Sleep / Dimmer	Sleep / Timer	Repeat	Green / APP / Repeat
Sleep / Dimmer	Shift + Mute / Dimmer	Clear	Exit / Cancel / Clear
Return	Back / Return	Top Menu	D.Menu / Top
1	1	Up / Preset+	Up
2	2	Up / Preset+	Shift + >>1 / Preset+
3	3	Menu	Menu / Home
Surround	Eject / Surround	Left / Tuning-	Left
4	4	Left / Tuning-	Shift + << /
5	5	Enter	OK
6	6	Right / Tuning+	Right
Scan Mode	TV/Radio /	Right / Tuning+	Shift + >> /
7	7	Set Up	Setup / OPT /
8	8	Down / Preset-	Down
9	9	Down / Preset-	Shift + I<< / Preset-





Original	Substituto
Display	Display / Media
Stop	Stop / Hold
Play / FM Mode	Play / Slow
Pause	Pause / Step / Freeze
Volume+	Vol+
I<<	I<< / Preset-
>>I	>>I / Preset+
Muting	Mute / Dimmer
<< / Slow-	<< / Tune-
>> / Slow+	>> / Tune+
Volume-	Vol-

Original	Substituto

