


 

 

 

 










 




















 



Original	Substituto
	 Power
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 D.Menu / Top
	 Menu / Home
	 Picture / Format
	 Up
	 Left
	 OK
	 Right
	 Down
	 Back / Return
	 Smart / List
	 Setup / OPT /
	 Play / Slow

Original	Substituto
	 Pause / Step / Freeze
	 I<< / Preset-
	 Stop / Hold
	 Eject / Surround
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Subtitle / EQ





Original	Substituto	Original	Substituto
 0	 0		
 Audio	 Audio / Lang I/II		

