



| Original | Substituto | Original | Substituto |
|----------|------------|----------|-------------------------|
| | Power | | Power |
| | Netflix | + | Shift + Red / Netflix / |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | TV | | TV/Radio / |
| | 0 | | 0 |
| | Recall | | Fav / Marker / PC |
| | Vol+ | | Vol+ |
| | Mute | | Mute / Dimmer |
| | PR+ | | CH+ / Page+ |

| Original | Substituto | Original | Substituto |
|----------|-----------------|----------|-----------------------|
| | Vol- | | Vol- |
| | i | | Info / Angle |
| | PR- | | CH- / Page- |
| | Menu | | Menu / Home |
| | Up | | Up |
| | Q.Menu | | D.Menu / Top |
| | Left | | Left |
| | OK | | OK |
| | Right | | Right |
| | Back | | Back / Return |
| | Down | | Down |
| | EXit | | Exit / Cancel / Clear |
| | World | | Smart / List |
| | Camera/Music/Ph | | Display / Media |
| | Guide | | Guide / EPG / -/- |
| | */o | | Picture / Format |
| | Games | | AV / Input / RDS |





| Original | Substituto | Original | Substituto |
|----------|-----------------------------|----------|------------|
| [=]/Text | GOTO TEXT Text / Goto | | |
| Red | Red / Netflix / Search | | |
| Green | Green / APP / Repeat | | |
| Yellow | Yellow / YouTube / Repeat | | |
| Blue | Blue / Prime Video / Random | | |
| Lang | Audio / Lang I/II | | |
| [=].. | Subtitle / EQ | | |
| [-O-] | Zoom / Size | | |
| << | << / Tune- | | |
| | Pause / Step / Freeze | | |
| >> | >> / Tune+ | | |
| Rec | Rec / Rec Mode | | |
| Play | Play / Slow | | |
| Stop | Stop / Hold | | |
| | | | |
| | | | |
| | | | |
| | | | |

