







 

 


Original	Substituto	Original	Substituto
PP	PP	 RETURN	Back / Return
	Power		Power
1	1	 TV	1
2	2	 DVD	2
3	3	 CD - STB	3
4	4	 VIDEO	4
5	5	 TAPE	5
6	6	 TUNER	6
7	7	 AUX - HDD	7
8	8	 USB	8
9	9	 BLUETOOTH	9
P<P	P<P	 PC FAV MARKER	Fav / Marker / PC
0	0	 HDMI - SAT	0
--	--	 GUIDE EPG	Guide / EPG / -/--
	Menu [M]	 HOME MENU	Menu / Home
	Info [i]	 ANGLE INFO	Info / Angle
	I-II	 LANG I/II AUDIO	Audio / Lang I/II

Original	Substituto	Original	Substituto
	Mute		Mute / Dimmer
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	V -		Vol-
	V +		Vol+
	P -		CH- / Page-
	P +		CH+ / Page+
	Red / Sound		Red / Netflix / Search
	Red / Sound		Sound / Title
	Green / Picture		Green / APP / Repeat
	Green / Picture		Picture / Format
	Yellow / Feature		Yellow / YouTube / Repeat
	Blue / Install		Blue / Prime Video / Random
	Text		Text / Goto





Original		Substituto	
	[≡o]	TIMER SLEEP	Sleep / Timer
	Hold	HOLD	Stop / Hold
	[≡X]	CLEAR EXIT CANCEL	Exit / Cancel / Clear
	Mix / PIP Swap	LIST SMART	Smart / List
	PIP / Size	SIZE ZOOM	Zoom / Size
	PIP Down / [≡?]	PRESET- I<<	I<< / Preset-
	PIP Up / Index	PRESET+ >>I	>>I / Preset+
	[TV]	PROGRAM TV/RADIO	TV/Radio /
	[AV]	RDS AV INPUT	AV / Input / RDS

Original		Substituto	

