
 

 






 

 



 




 







 




















Original	Substituto	Original	Substituto
 Power	 Power	 << Slow/Search	 << / Tune-
 Program	 TV/Radio /	 Slow/Search >>	 >> / Tune+
 Open/Close	 Eject / Surround	 Skip/Frame >>	 >> / Preset+
 1	 1	 Pause	 Pause / Step / Freeze
 2	 2	 Stop	 Stop / Hold
 3	 3	 Title	 Sound / Title
 4	 4	 Menu	 Menu / Home
 5	 5	 Display	 Display / Media
 6	 6	 Search Mode	 Red / Netflix / Search
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 +10	 Guide / EPG / -/-	 Select	 OK
 Play	 Play / Slow	 Return	 Back / Return
 C	 Exit / Cancel / Clear	 Zoom	 Zoom / Size
 I<< Skip/Frame	 I<< / Preset-	 Subtitle	 Subtitle / EQ

Original	Substituto	Original	Substituto
 Power	 Power	 TV	 DVD
 Program	 TV/Radio /	 SAT	 AUX
 Open/Close	 Eject / Surround	 SLOW	 STEP-FREEZE
 1	 1	 HOLD	 REC MODE
 2	 2	 TUNE-	 PRESET-
 3	 3	 TUNE+	 PRESET+
 4	 4	 TITLE	 LANG
 5	 5	 EQ	 SURROUND
 6	 6	 SOUND	 AUDIO
 7	 7	 SUBTITLE	 TIMER
 8	 8	 PICTURE	 PROGRAM
 9	 9	 ZOOM	 TV RADIO
 0	 0	 SLEEP	 RDS
 +10	 Guide / EPG / -/-	 TOP MENU	 AV INPUT
 Play	 Play / Slow	 D.MENU	 SETUP
 C	 Exit / Cancel / Clear	 OPT-TOOLS	 GOTO
 I<< Skip/Frame	 I<< / Preset-	 HOME	 TEXT
		 ANGLE	 INFO
		 MENU	 RETURN
		 OK	 BACK
		 CLEAR	 EXIT
		 CANCEL	 LIST
		 VOL+	 SMART
		 VOL-	 MEDIA
		 TV	 DISPLAY
		 DVD	 CH PAGE
		 CD-DBT	 1
		 VIDEO	 2
		 TAPE	 3
		 TUNER	 4
		 AUX-HDD	 5
		 USB	 6
		 BLUETOOTH	 7
		 HDMI-BAT	 8
		 GUIDE EPG	 9
		 FAV MARKER	 0
		 NETFLIX	 APP
		 SEARCH	 YouTube
		 REPEAT	 Prime Video
		 REPEAT A-B	 RANDOM
		 Mandis SHOP	 www.mandis.tv





Original	Substituto
AUDIO	Lang I/II AUDIO Audio / Lang I/II
ANGLE	ANGLE INFO Info / Angle
TIME	TIMER SLEEP Sleep / Timer
REPEAT	APP REPEAT Green / APP / Repeat
A→B	YouTube REPEAT A-B Yellow / YouTube / Repeat

Original	Substituto

