











 




 
















 



 




 


 
 










 


 





Original	Substituto	Original	Substituto
 Power	 Power	 Source	 AV / Input / RDS
 1	 1	 P-	 CH- / Page-
 2	 2	 Home	 Menu / Home
 3	 3	 Guide	 Guide / EPG / -/-
 4	 4	 i	 Info / Angle
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Down	 Down
 Lang	 Audio / Lang I/II	 Back	 Back / Return
 0	 0	 Exit	 Exit / Cancel / Clear
 TXT	 Text / Goto	 Netflix	 Shift + Red / Netflix /
 Vol+	 Vol+	 YouTube	 Shift + Yellow / YouTube /
 Mute	 Mute / Dimmer	 *1	 Display / Media
 P+	 CH+ / Page+	 prime video	 Shift + Blue / Prime
 Vol-	 Vol-	 Red	 Red / Netflix / Search

Original	Substituto	Original	Substituto
 Source	 AV / Input / RDS	 TV	 DVD
 P-	 CH- / Page-	 SAT	 AUX
 Home	 Menu / Home	 SLOW	 STEP-FREEZE
 Guide	 Guide / EPG / -/-	 HOLD	 REC MODE
 i	 Info / Angle	 TUNE-	 TUNE+
 Up	 Up	 PRESET-	 PRESET+
 Left	 Left	 EQ	 SURROUND
 OK	 OK	 SOUND	 AUDIO
 Right	 Right	 SUBTITLE	 TIMER
 Down	 Down	 PICTURE	 ZOOM
 Back	 Back / Return	 SLEEP	 PROGRAM
 Exit	 Exit / Cancel / Clear	 TOP MENU	 OPT-TOOLS
 Netflix	 Shift + Red / Netflix /	 D.MENU	 SETUP
 YouTube	 Shift + Yellow / YouTube /	 GOTO	 TEXT
 *1	 Display / Media	 RDS AV INPUT	 HOME
 prime video	 Shift + Blue / Prime	 ANGLE	 INFO
 Red	 Red / Netflix / Search	 HOME MENU	 OK



