














 
 
 


 
 


 

 

 



 

 
 
 

 

 






 
 



 



 
 
 

 
 


 

 
 




Original	Substituto	Original	Substituto
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down





 

 
 


 
 
 
 
 

 
 
 


Original		Substituto	
	QV		Options
	FAV		Pre Ch
	Source		AV
	Sleep		Sleep
	Picture		Shift + Format
	Sound		Shift + Dual
	Display		Info
	I/II / Top		Dual
	FAV - / REV		<<
	FAV + / FWD		>>
	USR/CR / Text		Media
	USR/CR / Text		Text
	Play/Pause / Index		Play
	Play/Pause / Index		Shift + Info
	Play/Pause / Index		Pause
	Stop / Cancel		Stop
	Stop / Cancel		Shift + Exit

Original		Substituto	
	Size		Format
	Prog / Mix		Smart
	Prog / Mix		Shift + Sleep
	Return / SUBPG		Back
	Repeat / Reveal		Shift + Back
	Search / Hold		TV/R





Original	Substituto	
	Power	
	AV	
	Exit	
	Menu	
	Dual	
	Media	
	Options	
	Text	
	TV/R	
	1	
	2	
	3	
	6	
	5	
	4	
	7	
	8	

Original	Substituto	
	9	
	0	
	Guide	
	Up	
	Right	
	Ok	
	Left	
	Down	
	Subt	
	Pause	
	Rec	
	<<	
	Play	
	>>	
	Shift + Media	
	Shift + Dual	
	Shift + 6	

