



























 

































 

 











 

 




 




 

 





Original	Substituto
	
Power	Power
	
Mute	Mute / Dimmer
	
TV	TV/Radio /
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8
	
9	9
	
0	0
	
TV/AV	AV / Input / RDS
	
Q.View	Fav / Marker / PC
	
Up	Up
	
Prog+	CH+ / Page+

Original	Substituto
	
Prog-	CH- / Page-
	
Down	Down
	
Right	Right
	
Vol+	Vol+
	
Left	Left
	
Vol-	Vol-
	
OK	OK
	
Menu	Menu / Home
	
Zoom	Zoom / Size
	
I/II	Audio / Lang I/II
	
Info	Info / Angle
	
P.Timer	Sleep / Timer
	
Swap	Back / Return
	
Picture	Picture / Format
	
Timer	Shift + Sleep / Timer
	
Sound	Sound / Title
	
Red	Red / Netflix / Search





Original	Substituto
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Display / Media
	 Stop / Hold
	 Shift + Zoom /
	 Text / Goto
	 Subtitle / EQ
	 Shift + Text /
	 D.Menu / Top
	 Exit / Cancel / Clear
	 Shift + Back / Return

Original	Substituto

