 

 
 

 
 





 

 
 
 



 
 

 
 


 



 
 




 



 





 



 









 

 




 



 

 







 

 




Original	Substituto	Original	Substituto
 Power	 Power	 Radio/+10	 Guide
 Mute	 Mute	 Recall/Program	 Back
 Source	 AV	 Tv Menu	 Menu
 P.Mode	 Shift + Format	 Exit	 Exit
 S.Mode	 Shift + Dual	 Goto/Text	 Text
 Audio/I/II	 Dual	 Display	 Info
 Sleep	 Sleep	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK/Enter	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 P+	 Ch +
 8	 8	 P-	 Ch -
 9	 9	 Red/DVD Setup	 Red
 0	 0	 Green/A-B	 Green

Original	Substituto	Original	Substituto
 Power	 Mute	 Shift	
 TV	 DVD	 SAT	 AUX
 Play Mode	 Rec Mode	 TV	 DVD
 Pause	 Stop	 Repeat	 AD
 Left	 Right	 Disc Nav	 Settings
 List	 Dual	 Sound	 Subt
 Prog	 Search	 Picture	 Eco
 Sleep	 TV/R	 Format	 3D
 E-Manual	 Repeat	 Zoom	 Timer
 D.Menu	 Text	 Up	 AV
 Top Menu	 Display	 OK	 Info
 Left	 Right	 Exit	 Back
 Home	 Smart	 Clear	 Home
 Vol+	 App	 Media	 Ch+
 Vol-	 Media	 Ch-	 Ch-
 1	 2	 3	
 4	 5	 6	
 7	 8	 9	
 Guide	 0	 Fav	
 A	 Pre-Ch		
 Mandis SHOP	 www.mandis.tv		





Original	Substituto
Yellow/Angle	Yellow
Blue/Repeat	Blue
Subtitle	Subt
Play	Play
Pause/Hold	Pause
Title/Size	Format
D.Dis/Reveal	Options
D.Menu/MIX	D. Menu
Zoom/Index	Shift + Eject
I<</FAV	I<<
>>I/Subpage	>>I
Stop/Language	Stop
<</FAV-	<<
>>/FAV+	>>
Eject/EPG	Eject
Media	Media
Rec	Rec

Original	Substituto
	3D
	TV/R

