



| Original | Substituto | Original | Substituto |
|---|----------------------|---|------------------|
|  | Power |  | Power |
|  | Portal/Energy Saving |  | Sleep / Timer |
|  | []/Ratio |  | Picture / Format |
|  | Input |  | AV / Input / RDS |
|  | TV |  | TV/Radio / |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | List |  | Smart / List |
|  | 0 |  | 0 |
|  | Q.View |  | D.Menu / Top |

| Original | Substituto | Original | Substituto |
|---|---------------|---|-------------------|
|  | Vol+ |  | Vol+ |
|  | Fav |  | Fav / Marker / PC |
|  | PR+/Page Up |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | 3D |  | Zoom / Size |
|  | PR-/Page Down |  | CH- / Page- |
|  | Mute |  | Mute / Dimmer |
|  | Settings |  | Setup / OPT / |
|  | Info/Home |  | Info / Angle |
|  | Q.Menu/3D |  | Menu / Home |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Back |  | Back / Return |
|  | Guide |  | Guide / EPG / -/- |



