


 
 
 




 



 

 
 
 
 
 

 
 


 
 
 





Original	Substituto	Original	Substituto
	Power		Power
	Tv/Radio		TV/R
	Subtitle		Subt
	Q Menu		Menu
	Guide		Guide
	[]/Ratio		Dual
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Original	Substituto	Original	Substituto
	List		List
	Q.View		Format
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	APP/*		Shift + Media
	Fav		Pre Ch
	PR+		Ch +
	PR-		Ch -
	Text		Text
	Info		Info
	T.Opt		Options
	Smart		Smart
	My Apps		Media
	Back		Back
	Exit		Exit
	Up		Up





Original	Substituto	Original	Substituto
 Down	 Down		
 Right	 Right		
 Left	 Left		
 OK	 Ok		
 Settings	 +  Shift + Options		
 Rec	 Rec		
 Stop/Line Tv	 Stop		
 <<	 <<		
 Play	 Play		
 Pause	 Pause		
 >>	 >>		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

