

 




 



 

 


 

 




 
 
 


 





Original	Substituto	Original	Substituto
	Power		Power
	e/Energy/Savin		Sleep / Timer
	AV Mode		Eject / Surround
	Input		AV / Input / RDS
	TV/RAD		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		Display / Media

Original	Substituto	Original	Substituto
	Vol+		Vol+
	FAV/Mark		Fav / Marker / PC
	P+		CH+ / Page+
	Vol-		Vol-
	Ratio		Picture / Format
	P-		CH- / Page-
	Mute		Mute / Dimmer
	Menu		Menu / Home
	Guide		Guide / EPG / -/-
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Info		Info / Angle





Original	Substituto	Original	Substituto
 Exit	 Exit / Cancel / Clear		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Text	 Text / Goto		
 T.Opt	 Setup / OPT /		
 Subtitle	 Subtitle / EQ		
 Stop	 Stop / Hold		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Simplink	 Zoom / Size		
 AD	 Audio / Lang I/II		

