
 
 



 
 

 

 

 
 

 
 


Original	Substituto
 Power	 Power
 E-Manual	 Shift + D. Menu
 []/Ratio	 Dual
 Input	 AV
 Tv/Rad	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List
 Q.View	 Format

Original	Substituto
 3D	 3D
 Vol+	 Vol +
 Vol-	 Vol -
 FAV	 Pre Ch
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 Menu	 Menu
 Home	 Smart
 Back	 Back
 My	 D. Menu
 Guide	 Guide
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original	Substituto	Original	Substituto
 OK	 Ok		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Text	 Text		
 Subtitle	 Subt		
 Stop/Live Tv	 Stop		
 T.Opt	 Options		
 Play	 Play		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		
 Rec	 Rec		
 Info	 Info		
 Simplink	 Media		
 Saving Energy	 Shift + 3D		

