



 

 
 


 



 

 

 







 

 

 







Original	Substituto	Original	Substituto
	Power		Power
	Tv/Rad		TV/Radio /
	Subtitle		Subtitle / EQ
	AD		Audio / Lang I/II
	Ratio		Picture / Format
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0

Original	Substituto	Original	Substituto
	Q.View		Display / Media
	Vol+		Vol+
	FAV		Fav / Marker / PC
	P+		CH+ / Page+
	Vol-		Vol-
	Guide		Guide / EPG / -/-
	P-		CH- / Page-
	Mute		Mute / Dimmer
	Text		Text / Goto
	Info		Info / Angle
	T.Opt.		Setup / OPT /
	Settings		Menu / Home
	Up		Up
	Q.Menu		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right





Original		Substituto		Original	Substituto
	Back		Back / Return		
	Down		Down		
	Exit		Exit / Cancel / Clear		
	AV Mode	 + 	Shift + AV / Input / RDS		
	AV Mode		Eject / Surround		
	Rec		Rec / Rec Mode		
	Stop		Stop / Hold		
	<<		<< / Tune-		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	>>		>> / Tune+		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		

